


Installation Instructions


HoldRite® HydroFlame™ Putty Pad

WALL INSTALLATION

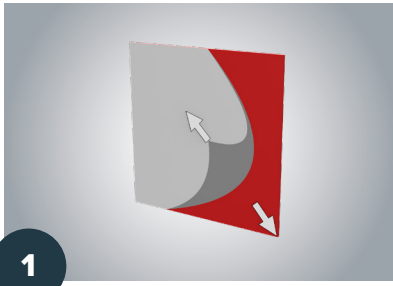


1

Remove releasing film from the putty pad.

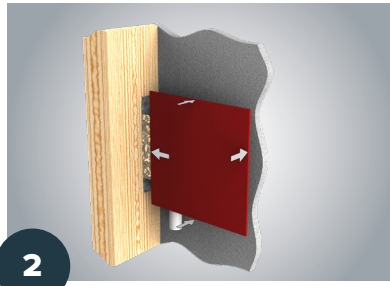


2

Align pad to the side of the electrical box partially overlapping the stud and adhere.

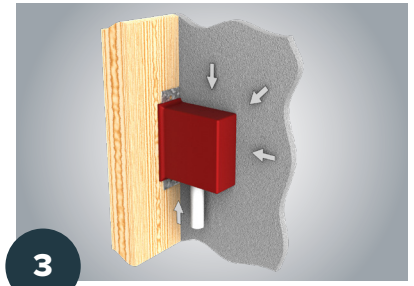

3

Work pad to opposite side of the electrical box working it into the edges.

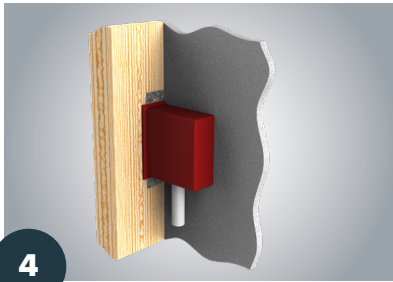

4

Smooth surface and corners to form the shape of the electrical box. Make sure to have the proper overlap on adjoining stud and drywall surfaces.

